

Lenkungsdämpfer Art.-Nr. 43.320

Verhindert ein Umherschwingen des Vorderrades.


Lesen Sie vor Verwendung dieses Produkts die Montageanleitung, um sicherzustellen, dass es richtig montiert ist.





Teilleiste			
 1x A	 1x B	 1x C	 1x G
 1x D	 1x E	 1x F	

Montageanleitung:


SCHRITT 1

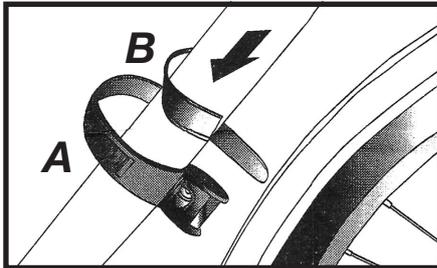


SCHRITT 2

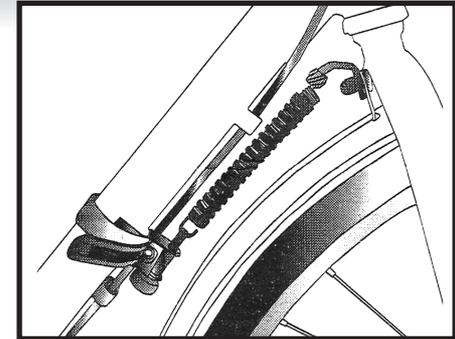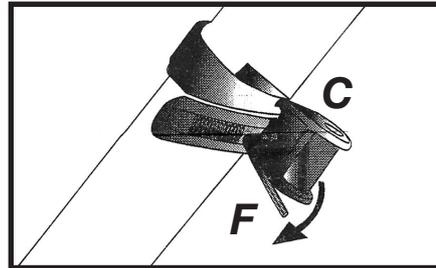

SCHRITT 3

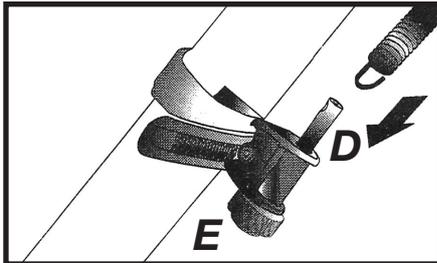

SCHRITT 4

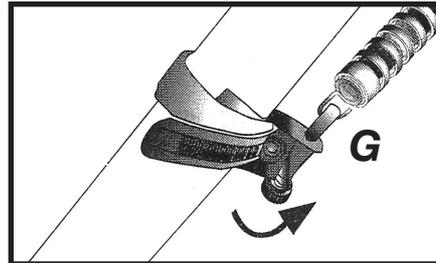

ANLEITUNG:

- Schritt 1:** Befestigen Sie das TPR-Polster (B) zwischen Abwärtsstange und Halter (A).
Schritt 2: Stecken Sie die Verstellerschraube (C) in den Halter und ziehen Sie sie mit einem Imbusschlüssel fest an (F).
Schritt 3: Montieren Sie die Einpressmutter (E) und die Schraube (D) und stecken Sie dies dann in den Halter.
Schritt 4: Ist die Feder (G) in der Schraube (D) eingehakt, ist auch nach der Montage eine Einstellung möglich.

Steering damper Art.-Nr. 43.320

**Prevents the front wheel
 front swing around.**


Please read the
 installation instructions
 before using this
 product to reconfirm
 if installed correctly.





Partlist			
 1x A	 1x B	 1x C	 1x G
 1x D	 1x E	 1x F	

Installation instruction:


STEP 1

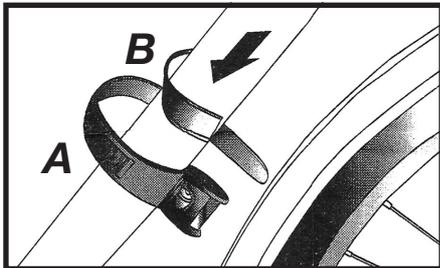


STEP 2

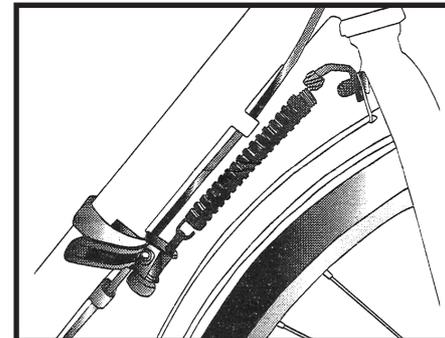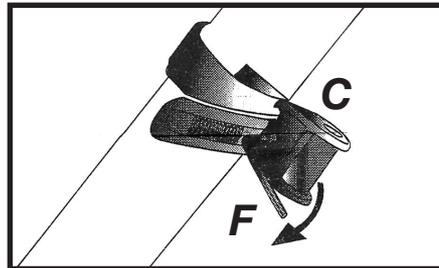

STEP 3

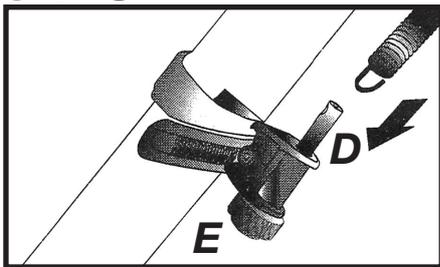

STEP 4

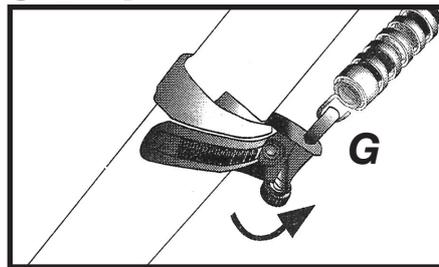

ASSEMBLY INSTRUCTION:

Step 1: Place the TPR pad (B) between down tube and bracket (A).

Step 2: Insert adjusting screw (C) into bracket, and tighten it by using Allen Key (F).

Step 3: Assemble the injected nut (E) and screw (D), and then insert into the bracket.

Step 4: With the spring (G), hook on screw (D), which is adjustable after the assembling.